


## 17.Brake Vacuum Sensor

### A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Disconnect the brake vacuum sensor connector.
- 3) Remove the vacuum hose from the brake vacuum sensor.
- 4) Remove the bolt, and remove the brake vacuum sensor.

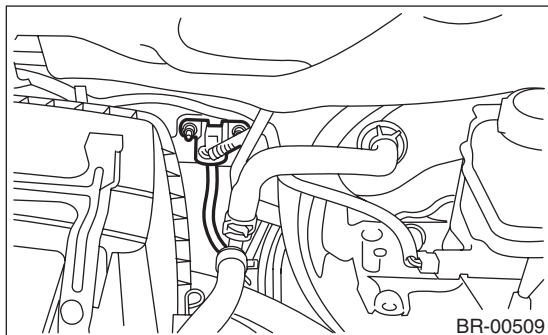

### B: INSTALLATION

Install in the reverse order of removal.

**Tightening torque:**

**5 N·m (0.5 kgf-m, 3.7 ft-lb)**